

Sea-Lect Y-Valve Installation

YV-094D-L

This model Y-valve is an “in-line” valve. No mounting is required. Simply slide the hoses over the end ports and clamp them for a snug fit.



Question


“How do I install my Sea-Lect Y-Valve?”



YV-094D-L
In-line Y-valve.

YV-094D-B and YV-095D-B

These Y-valves are designed to be mounted by the base or feet. There are three (3) holes in the base. Use these holes to mark where you wish to install the valve and drill holes for a snug fit.

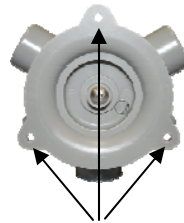

Three (3) mounting holes at base of base-mounted Y-valve




YV-094D-B
Base-mount Y-valve.

YV-094D-F and YV-095D-F

These Y-valves are designed to be flush mounted either through a deck or bulk-head.

Using the bonnet or trim ring supplied with your Y-valve, mark where the screw holes and the hole for the handle needs to be, drill the holes. Mount the valve in place, being sure to mount the main valve assembly behind the deck or bulk-head. After installation, the only part of the Y-valve that will be visible is the handle or bonnet/trim ring.

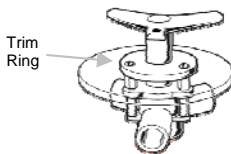


Bonnet (standard)



Livewell—
Washdown Trim
Ring

 Flush mount Y-valve bonnet and trim ring showing three (3) mounting holes

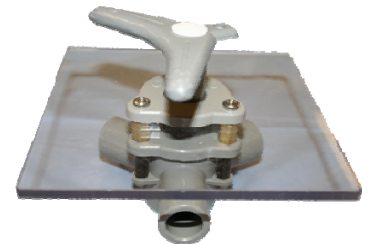

YV-094D-F
Flush-mount Y-valve.