




Bucket Guzzler®



KEEP THIS DOCUMENT

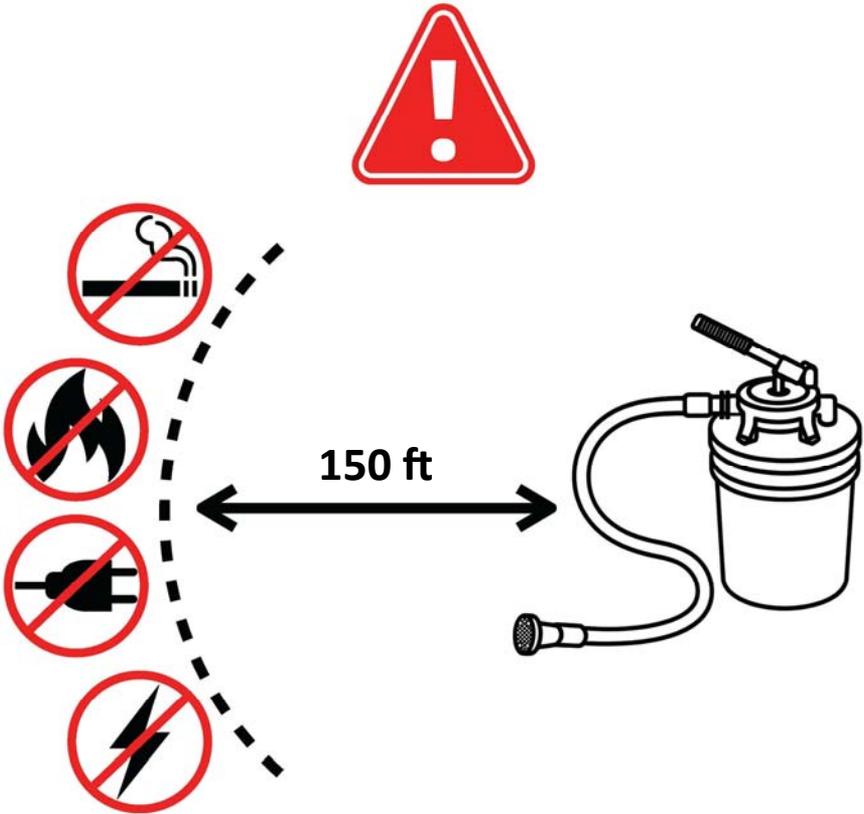

NO smoking, flames, electricity or sparks within 150 ft!

DO NOT store flammable liquid in the Bucket Guzzler!

Place pail firmly **on the ground** when operating.

DO NOT USE FOR TRANSFER OF ANY FLAMMABLE LIQUID
WITHOUT ADEQUATE PROVISION TO
AVOID STATIC ELECTRICAL DISCHARGE!

Care & Maintenance

Always use strainer at end of hose to keep out debris.



After use with flammable liquids, rinse thoroughly by pumping 1-2 gallons of warm water through hose and pump.

Wash pail with hot water and dish soap. Rinse and let dry.

Store in a well-ventilated area, at temperatures above freezing and away from any possible source of spark or flame.




Avoid leaving water in hose under freezing conditions.



Do not try to work a frozen pump. Let ice thaw first.

Troubleshooting

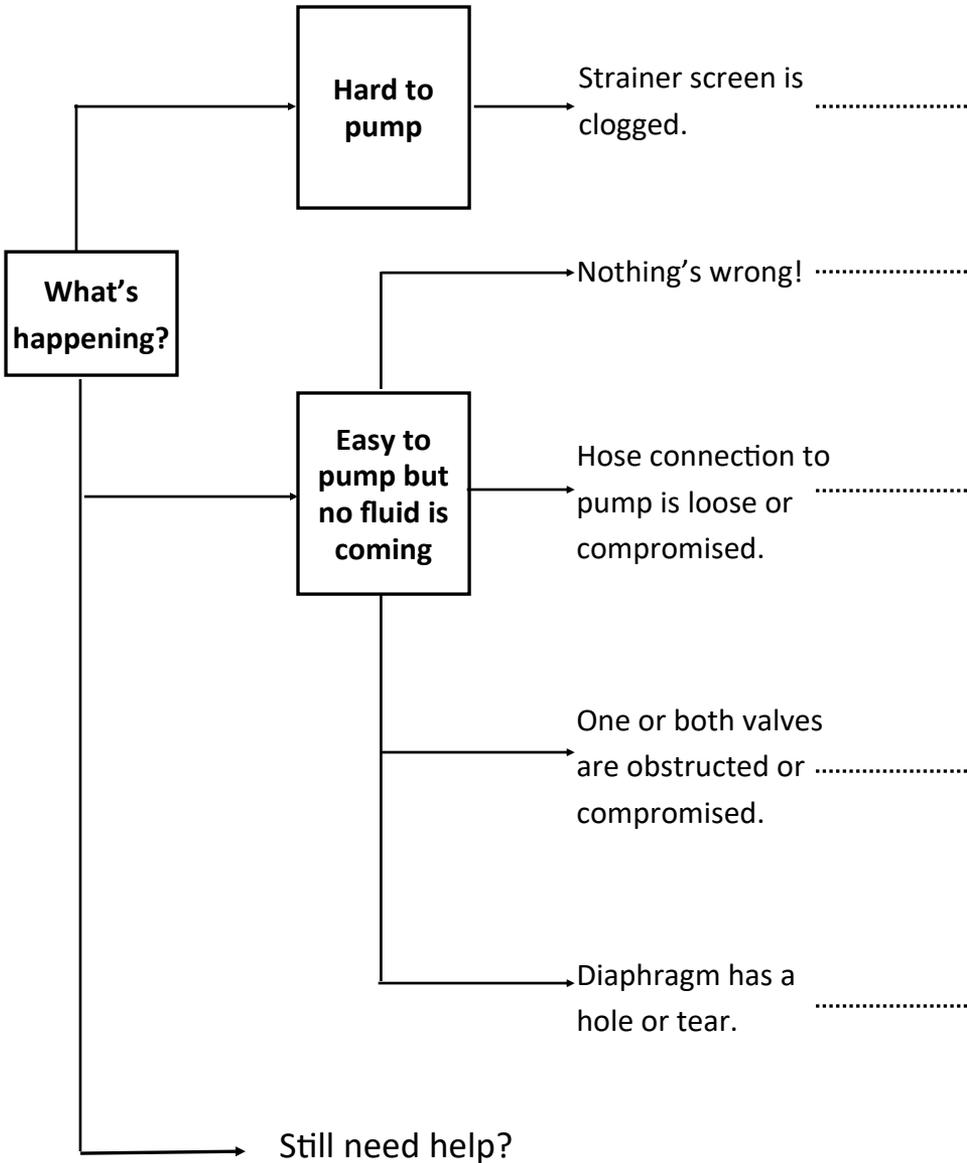

Call us: **+1 401-438-1110**

Monday-Friday 8:00am - 4:00pm EST


Strainer



.....Inspect and clean strainer screen.

.....When pumping starts, only air is moving through pump. Pumping will become harder as fluid “climbs up” the hose. Pump can take 5-10 strokes to prime with a 6 ft hose; more strokes with longer lengths.

.....Ensure hose is securely attached. Use the included hose clamp if needed. Check for leaks. Replace hose if dam-

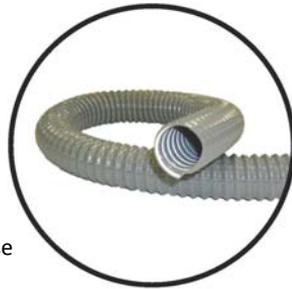

Hose

.....Inspect each valve one at a time. Clear any debris.
Scan QR codes on page 5 for help removing/installing valves.




Inspect and replace if damaged.
Scan QR code for help replacing diaphragm.



Diaphragm

Valves

If your Bucket Guzzler has duckbill valves ...

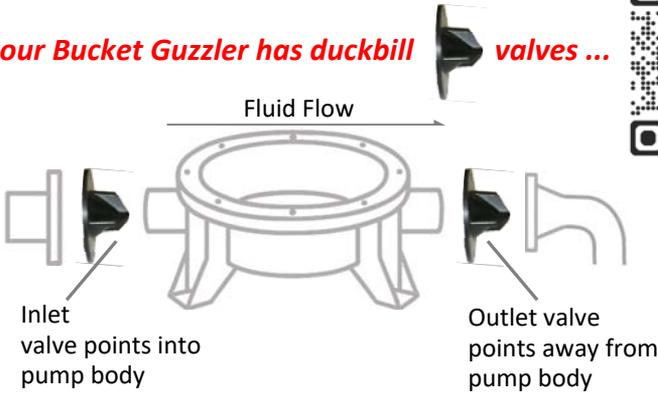


Pointed end of valve points in direction of fluid flow.

If your Bucket Guzzler has flapper valves ...




Side with white dot points in direction of fluid flow.

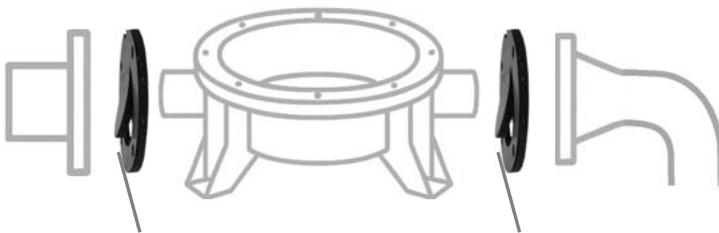

Bend

Note: If your flapper valve has become bent with use, install with bent side opposite to direction of fluid flow.

Parts

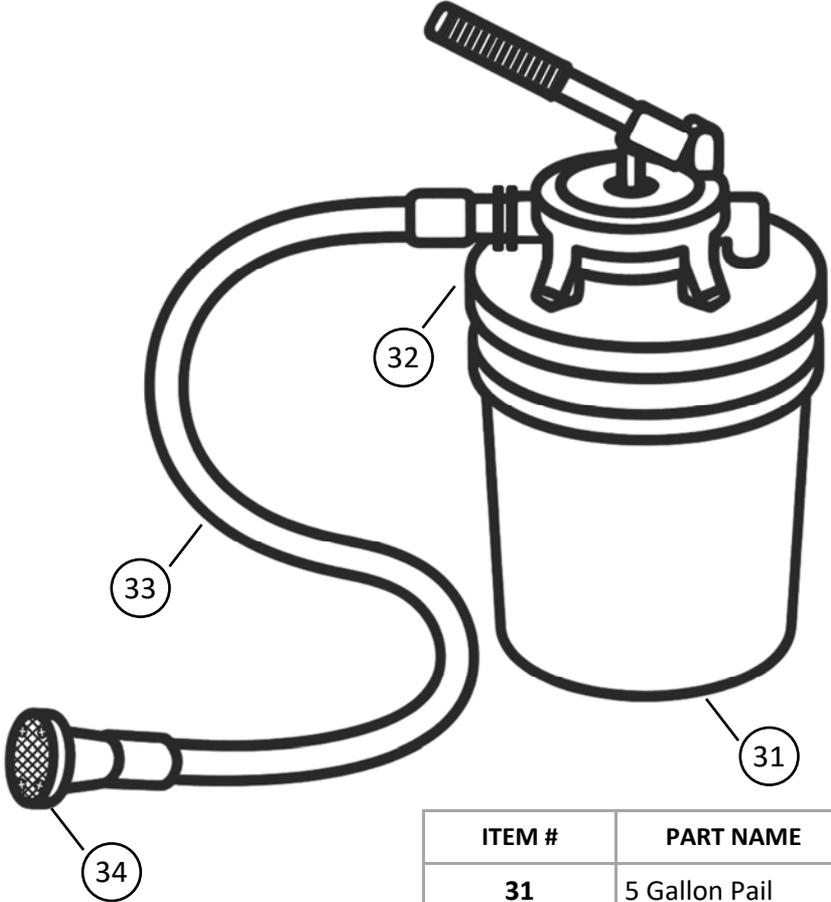


ITEM #	PART NAME
31	5 Gallon Pail
32	EZ-Off Pail Lid
33	Hose
34	Strainer

To order replacement parts, scan the QR code:



Parts

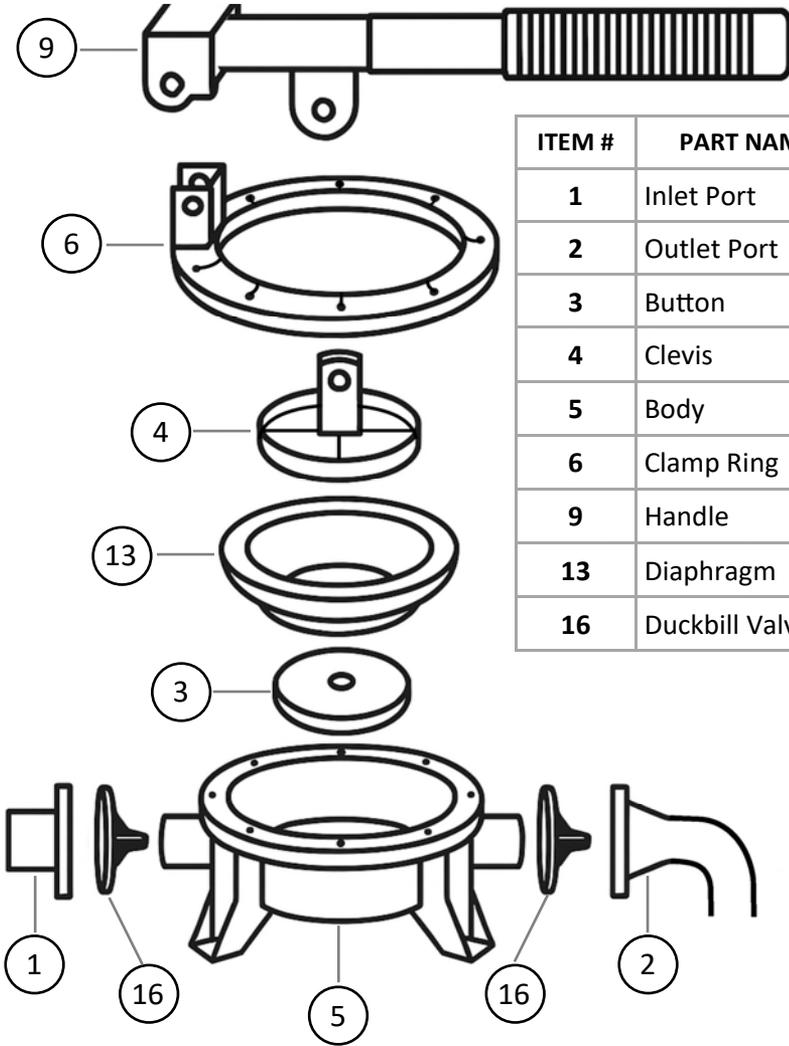

ITEM #	PART NAME
1	Inlet Port
2	Outlet Port
3	Button
4	Clevis
5	Body
6	Clamp Ring
9	Handle
13	Diaphragm
16	Duckbill Valve

To order replacement parts, scan the QR code:

