




GUZZLER® G2-0501N
120 VAC SAPPULLER DOUBLE DIAPHRAGM PUMP

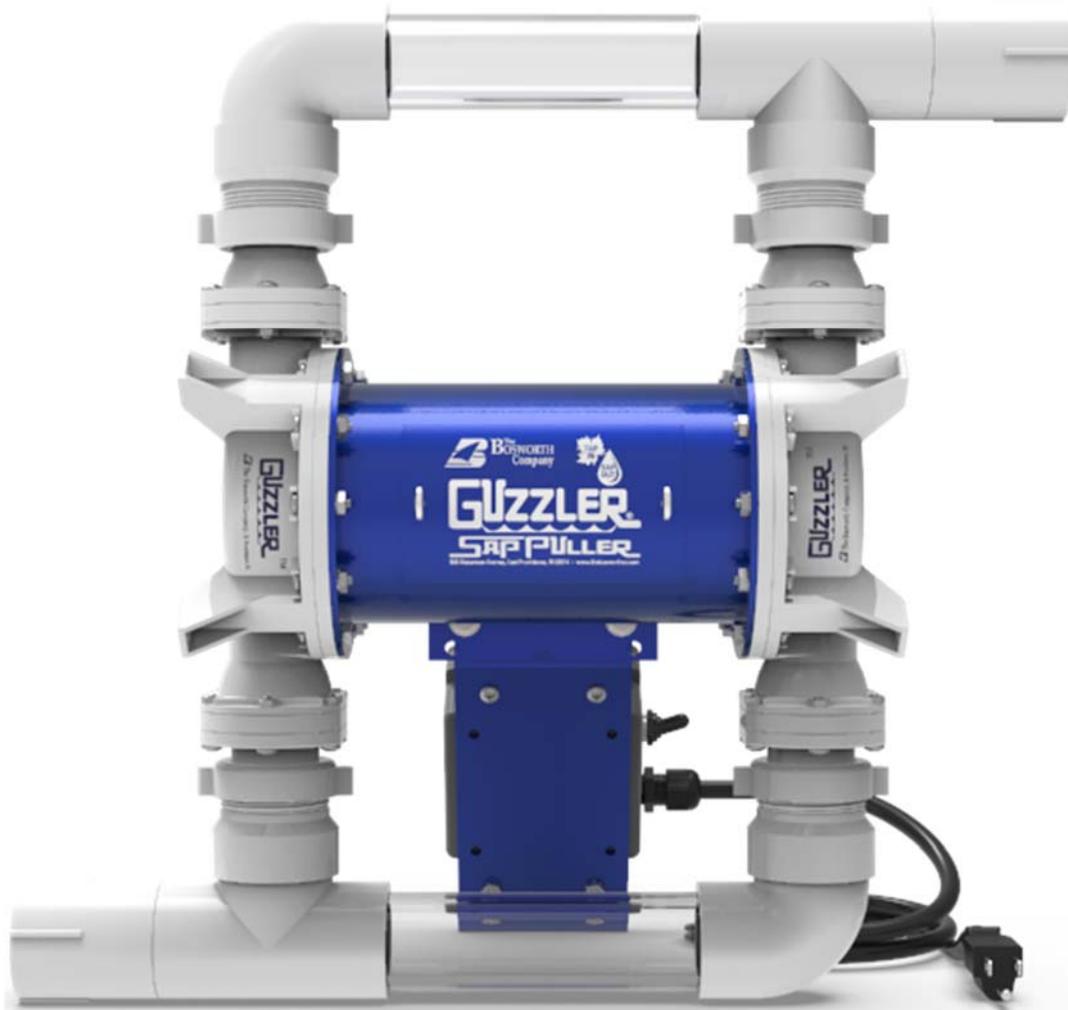

OPERATOR'S MANUAL

WWW.THEBOSWORTHCO.COM

INDEX

INTRODUCTION..... 2

 Assembling Your Pump..... 2

 Power Requirements 2

 Testing the Pump..... 2

PUMP SETUP 3

 Protect the Pump from the Elements..... 3

 Ventilate Pump to Keep from Overheating..... 3

 Quick Connect Couplers between Guzzler and Mainline..... 3

 Install Shut-off Valve and Vacuum Gauge at Pump Inlet..... 3

 Minimize Pump Back Pressure 3

 Use a Strainer to Keep Foreign Materials and Ice from Entering the Pump 4

 Recirculation Line for Best Vacuum 4

TIPS FOR BEST OPERATION 4

 Eliminate Leaks for Best Vacuum 4

 Isolate the Pump to Find Cause of Vacuum Loss 4

 Keep Ice from Forming Inside Pump..... 4

 Drain Sap if Removing Pump from Mainline..... 4

MAINTENANCE - CHANGING A DIAPHRAGM 5

 Removing a Diaphragm 5

 Installing a Diaphragm..... 6

MAINTENANCE - CHANGING PUMP VALVES..... 6

 Pump Valves 6

 Changing the Valves..... 6

TROUBLESHOOTING 7

TECHNICAL SUPPORT..... 8

PUMP EXPLODED VIEW 9

IMPORTANT SAFETY INFORMATION

NEVER OPERATE YOUR GUZZLER® PUMP WITHOUT THE PUMP COVER PLATE PROPERLY INSTALLED ON THE PUMP.

NEVER REACH INSIDE THE PUMP OR INSERT ANY OBJECTS INTO THE PUMP WHILE THE PUMP IS OPERATING. SERIOUS INJURY OR DAMAGE TO THE PUMP WILL RESULT.

ALWAYS CONNECT THE PUMP TO A 120 VAC POWER SOURCE USING PROPERLY INSULATED CONNECTORS. OPERATING THE PUMP WITHOUT PROPER ELECTRICAL CONNECTIONS CAN CREATE A SERIOUS RISK OF ELECTRICAL SHOCK.

Your Guzzler® G2-0501N 120 vac diaphragm pump ships with two spare diaphragms. Additional diaphragms can be purchased through your maple equipment dealer or directly online from The Bosworth Company at www.thebosworthco.com.

Your pump's **serial number** can be found on the side of the pump gearmotor, as shown in Figure 1.

Assembling Your Pump

Your Guzzler G2-0501N pump ships with the outlet manifold disconnected from the pump and packed separately in the box.

To assemble your pump, simply attach the outlet manifold to the twin pump bodies by slipping the manifold elbow and "T" fittings over the outlet flanges of the pump bodies. (Figure 2)

Secure the manifold to each pump flange by tightening the Coupler Nut (#10 in the Exploded View) on the pump flange onto the threaded ends of the manifold. The nut forces the nylon sleeve against the manifold to make a secure, leak-free connection.

Note that you can connect the outlet manifold to your pump so that the outlet end of the manifold is on the same side as the end of the inlet manifold, or the opposite side (Figure 3). Similarly, the inlet manifold can be connected to your pump with the inlet end facing in either direction. Choose an orientation for your inlet and outlet manifolds that best suits the orientation of your incoming and outgoing sap lines.

Power Requirements

The Guzzler G2-0501N *SapPuller* requires 120 vac power. If power is not readily available, it can be provided from a generator that supports a minimum 200 running watt output. The motor is a 120 watt motor that is rated for 1.44 amps at full load. We recommend a minimum of 1,000 generator to ensure that your pump has the power required to start up under very cold temperatures. Be sure that the generator is actually delivering 120 vac, as deviations from this voltage – lower or higher – will result in improper motor operation.

The pump on/off switch is located on the side of the electrical junction box .


Testing the Pump

Before installing the pump in your sugarbush, test your pump by connecting it to power and turning the Power switch to On. Carefully cover the inlet port with your hand. Then move your hand to cover the outlet port of the pump. If you can feel vacuum at the inlet port (sucking your hand in) and positive exhaust pressure at the outlet port (pushing your hand away), the pump is operating properly.



Pump serial number on side of motor

Figure 1

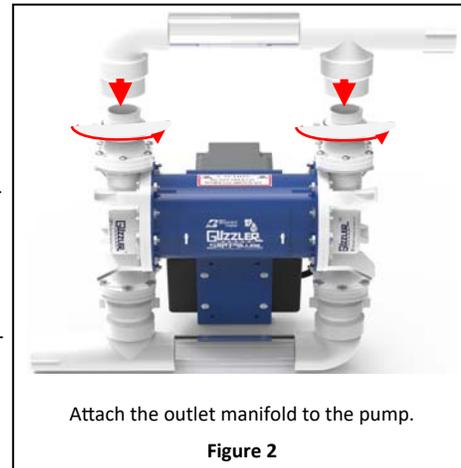

Attach the outlet manifold to the pump.


Figure 2



G2 Manifolds are reversible.

Figure 3

PUMP SETUP

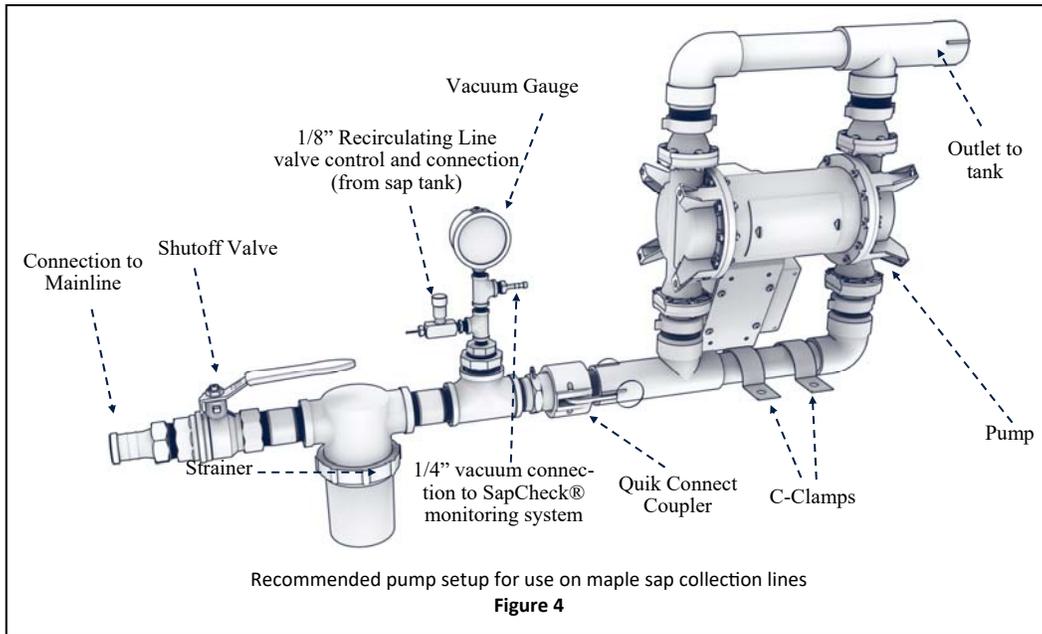

PUMP SETUP

Figure 4 shows a recommended installation setup for the Guzzler G2-0501N pump when used for vacuum production on a maple sap collection line. The topics below refer to that figure in more detail.

Protect the Pump from the Elements

However you deploy your pump, ensure it is protected from the elements and securely mounted. Use the two C-clamps provided with your pump to secure the inlet flange to the mounting surface. The support leg of the pump has a mounting hole that accommodates a 1/4 in (6.4 mm) diameter bolt or screw.

Ventilate Pump to Keep from Overheating

When operating, the pump can develop a motor surface temperature that may exceed 160°F (70°C). If you install your pump in an enclosure, ensure that it provides ventilation so that the pump motor has adequate airflow during operation to prevent overheating. The pump motor is thermally protected and will shut off if overheated.

Quick Connect Couplers between Guzzler and Mainline

We recommend the use of Quick Connect Couplers between the pump inlet and mainline so that the pump can be easily disconnected from and reconnected to your mainline.

Install Shut-off Valve and Vacuum Gauge at Pump Inlet

We recommend that you install a shut-off valve and a vacuum gauge – in that sequence – “in front of” the pump, i.e., just before your connection to the pump’s inlet port (Figure 4). This will allow you to isolate the pump from your sap lines for trouble-shooting purposes.

Minimize Pump Back Pressure

Back pressure at the pump outlet will shorten diaphragm lifetime. To minimize back-pressure, install your Guzzler at or above your collection tank level. Avoid having the pump “push” sap up a vertical distance or through a long outlet hose/pipe. Avoid the use of right-angle bends in the pump’s outlet path, as these can add substantially to back pressure.

Use a Strainer to Keep Foreign Materials and Ice from Entering the Pump

Early in the season, sap may contain small wood or plastic shavings that can foul or tear the pump valves or diaphragm. (Even sharp ice chips, upon entering the pump, can create the same problem.) We recommend installing a strainer of the kind pictured in Figure 4 to keep such material from being drawn into the pump. A strainer with a transparent cap will allow you to see when the filter screen needs to be cleaned so that it does not obstruct sap flow into the pump.

Recirculation Line for Best Vacuum

Guzzler pump valves seal best when wet. To achieve the best vacuum with your Guzzler, we recommend that you install a small (1/8" to 1/4" in diameter) recirculation line from your collection tank back to the inlet of the Guzzler (Figure 4). Regulate this backflow of sap by installing a small shutoff valve where the line connects to the inlet. When the pump is running, open the valve to allow a small amount of sap to flow back from the collection tank into the pump. This ensures the valves remain wet and seal optimally. With a recirculating line, some users have increased vacuum to as much as 28 in Hg.

TIPS FOR BEST OPERATION

Eliminate Leaks for Best Vacuum

Your Guzzler Pump can develop 19-28 in. of Hg vacuum, depending on whether the valves are dry or wet. Because the Guzzler is a low-cfm (cubic feet of air per minute) pump, even very small leaks can prevent the pump from delivering its rated vacuum. Maintain your tap lines to keep your system tight and address problems that can cause vacuum leaks.

Isolate the Pump to Find Cause of Vacuum Loss

If you experience a loss of vacuum in your system – as registered by the gauge near the pump – slowly turn the shut-off valve to isolate the pump from your mainline. **DO NOT SHUT THE VALVE SUDDENLY, AS PUMP DAMAGE MAY RESULT.** If the gauge begins to return to normal operating vacuum, then the pump is working properly, and the source of the leak is somewhere in your sap lines or taps.

If the pump fails to recover normal vacuum, then the pump is the source of the problem. Inspect the pump diaphragms and/or valves for any holes or tears. In the case of the valves, check for and remove any material that may have entered a pump body and lodged in the valve, preventing the valve from proper opening and closing.

Keep Ice from Forming Inside Pump

Sap can freeze within the pump body. If the pump is turned on when there is ice in a pump body, it will result in damage to various pump components, including the pump body, valves and diaphragm. If there is a risk of freezing conditions, we recommend that you disconnect the pump from your sap lines when the pump is not running and drain any excess sap from the pump. Some users install a small heat lamp in the enclosure with the pump to prevent ice from forming when the pump is not operating.

Drain Sap if Removing Pump from Mainline

To shut the pump down and disconnect it from the mainline, first slowly close the shut-off valve to isolate and maintain any vacuum in the mainline. Then, turn the pump off. Disconnect the pump from the mainline, using Quick Couplers if you have used these for your pump-to-mainline connection. Turn the pump back on briefly to flush any remaining sap from it. Finally, tilt the pump to drain any remaining sap.

MAINTENANCE - CHANGING A DIAPHRAGM

Over time, the elastomer components of the pump (i.e., the diaphragm and valves) will fail. If a diaphragm fails, the pump may continue to develop some vacuum (depending on the size of the hole/tear), but it will be significantly reduced, and you will see sap leaking from the diaphragm and out through the “weep” holes at the base of the pump cylindrical housing.

When replacing the diaphragm, pay close attention to the orientation of various parts. The use of witness marks may be helpful during reassembly.



Tools Needed: Philips Head Screwdriver, Flat Head Screwdriver

Materials Needed: Blue Loctite 242

Removing a Diaphragm

1. Disconnect the power.
2. Place the pump assembly with the motor in a vertical position.
3. Remove the manifolds by loosening the hose clamps holding the manifold to the pump flanges.
4. Remove the 10 screws holding the pump body to the housing (Figure 5).
5. Remove the pump body to expose the diaphragm screw attaching the plastic “button” (a plastic support plate) to the diaphragm.
6. Pull the diaphragm out to its maximum travel. Remove the slotted head screw, washer, button and diaphragm from the plastic clevis (Figure 6).

*Note: If you plan to change the valves, do so now. Go to **Maintenance—Changing Pump Valves**, otherwise, go to **Installing a Diaphragm**.*

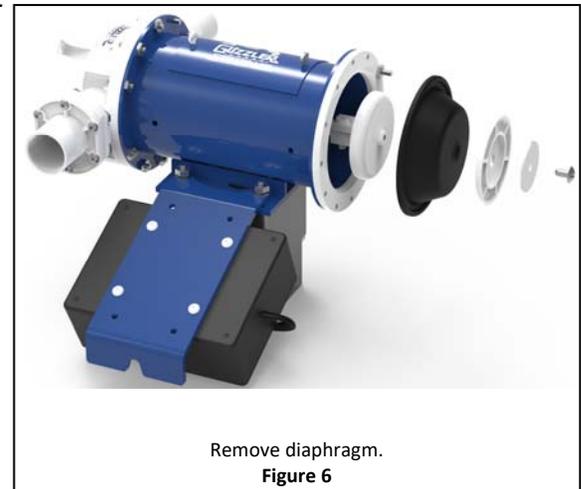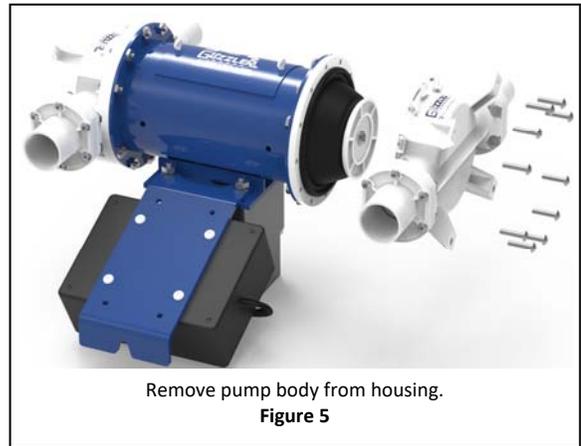


Installing a Diaphragm

1. Place the new diaphragm onto the base of the plastic clevis, ensuring it is seated on the raised central boss; install the button (rounded-edged toward diaphragm) and stainless steel washer, seating them on the boss as well (Figure 7).

Note: Be sure to place the diaphragm on the plastic clevis so that the “lip” running along the diaphragm’s circumference is facing toward you. The other side of the diaphragm’s outer edge is flat.

2. Secure the above with the diaphragm screw. Be sure the screw is tight. We recommend using blue Loctite on the screw to help ensure it does not come loose during pump operation.
3. Place the pump body up against the diaphragm and align it with the holes in the housing. Be sure that the diaphragm’s outer lip sits in the groove running around the circumference of the pump body (Figure 8). (Note: Ensure the pump body is installed in the correct orientation, with the outlet port facing up.)
4. Fasten the pump body to the housing using the 10 screws and nuts. Start all screws and nuts before tightening them down. Tighten to a maximum of 30 in-lbs of torque. Tighten screws evenly (crisscross pattern). Do not completely tighten screws until everything is aligned.
5. If necessary, repeat from step 4-6 from **Removing a Diaphragm** for the other pump body.
6. Replace the manifolds and tighten all hose clamps.

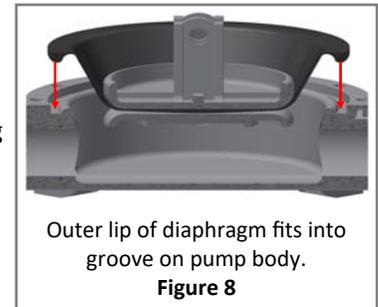


MAINTENANCE - CHANGING PUMP VALVES

Pump Valves

Each pump body in the Guzzler G2 Sap Puller pump features a pair of valves (total of 4 valves per pump). A valve is fastened between the pump body and each of its inlet and outlet ports (Figure 9).


Valves are typically replaced in pairs; i.e., the inlet and outlet valve of a given pump body are replaced at the same time.

When replacing a pair of pump valves, it is best that only one valve is removed and replaced before attempting to remove and replace the other valve.

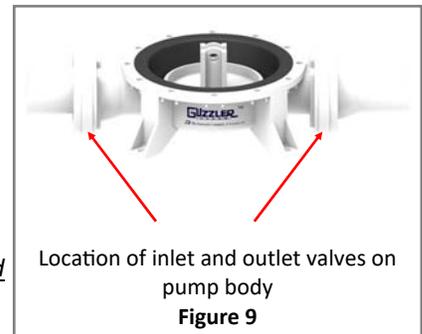

Changing the Valves



1. Follow steps 1-4 in **Removing a Diaphragm**.
2. Remove the 6 screws holding the inlet flange to the pump body. The umbrella valve is located between this flange and the pump body (Figure 10).
3. Inspect the valve for any tears. Inspect the valve pores and remove any dirt or material that may have become lodged in the pores. Inspect O-rings for any sign of wear and replace as necessary. Ensure that they are correctly installed in the grooves of the valve stop.

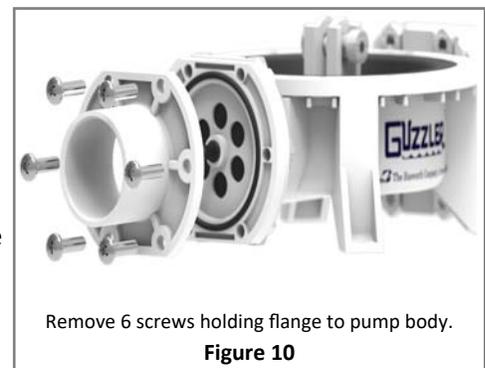

MAINTENANCE - CHANGING PUMP VALVES / TROUBLESHOOTING

Changing the Valves, continued

4. To replace the umbrella valve, use a pair of pliers to grasp the flat portion of the old umbrella valve and pull the entire valve through the valve stop center retaining hole (Figure 11). Insert the stem of the new valve into the valve stop retaining hole so that the flat portion of the valve is on the same side of the valve stop as the old valve. Use pliers to grasp the stem of the valve on the other side and pull it completely through until it snaps into place.
5. Position the new umbrella valve (or the inspected and cleaned old valve) between the pump body and the pump inlet flange, taking care to orient the valve as shown in Figure 12. Fasten the pump flange and the valve stop to the pump body using the flange screws.
6. Re-install the inlet manifold.
7. Repeat steps 2-6, this time with the outlet side of the pump. However, when installing the umbrella valve **on the pump outlet, be sure that the valve is oriented so that the flat side of the rubber valve faces away from the pump body and toward the outlet flange.**

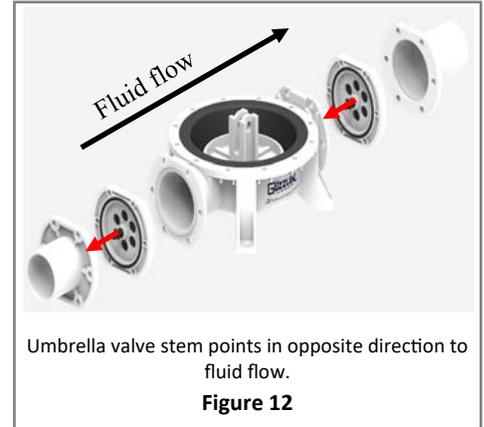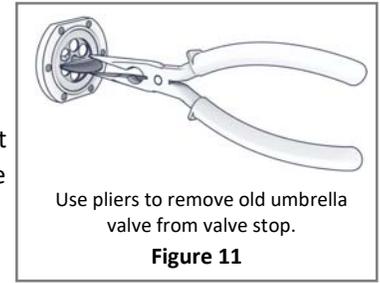

NOTE: IF THE VALVES ARE NOT ORIENTED CORRECTLY IN THE PUMP FLANGES, THE PUMP WILL NOT FUNCTION PROPERLY AND COULD BE DAMAGED UPON OPERATION.

TROUBLESHOOTING


PROBLEM	WHAT TO DO
<i>"The pump was working fine and then stopped."</i>	Inspect your power source to ensure that it is providing 120 vac power. Ensure that you have provided adequate ventilation for the motor. The motor is thermally protected and will shut down if overheated. If this happens, allow the motor to cool down before restarting it.
<i>"My motor is very hot. Is something wrong?"</i>	A properly operating motor can be uncomfortably hot to the touch. Even with adequate ventilation, the motor develops a good deal of surface temperature when operating. This alone does not indicate anything is wrong.
<i>"I'm only getting 19-20 in Hg vacuum at the pump. How can I get more?"</i>	Pump valves seal better when wet. When dry, the pump valves will generally produce 19-20 in Hg vacuum. If the valves are wet, their improved sealing can create up to 28 in Hg vacuum on leak-free sap lines. Installing a recirculation line from your sap tank back into the inlet of the pump will help keep the pump valves wet and maximize pump vacuum. (See <i>Recirculation Line for Best Vacuum</i>).

PROBLEM	WHAT TO DO
<p><i>"I've got little or no vacuum on the gauge at my pump."</i></p>	<p>If you have installed a shut-off valve in front of the vacuum gauge, slowly turn the valve to the off position to isolate the pump from your sap lines. If the vacuum gauge goes back up, then the pump is operating properly and you should check your lines for a leak.</p> <p>If the vacuum gauge doesn't go back up, then the pump is the problem. Inspect each pump to see if sap is leaking around the diaphragm. Leaking sap indicates a diaphragm is torn or has developed a hole. If the diaphragm is leaking, replace it.</p> <p>If no sap is leaking from either of the pump diaphragms, then disconnect the pump from your sap lines. Remove the pump manifolds (top and bottom) and, with the pump turned on, place your hand over the inlet/outlet of each pump to determine if you can feel pump suction at the inlet and exhaust pressure at the outlet. If you do not feel the suction and pressure for a pump, and there is no tear/hole in the diaphragm, then the valves are at fault. Inspect the inlet and outlet valves. Remove any material that might be preventing the valves from opening/closing properly. If the valves are torn or worn, replace them.</p>
<p><i>"My pump is frozen. Should I start it up?"</i></p>	<p>Do not start a pump if you suspect there is ice in any of the pump bodies. Starting a pump when there is ice in the pump bodies could tear the pump diaphragm and/or damage the pump body. Allow the pump to thaw before restarting.</p>
<p><i>"I've got good vacuum at the pump and there's sap in the lines, but nothing's going into my tank."</i></p>	<p>If you have installed a filter near the inlet of the pump, check the filter screen to ensure that it is not clogged with foreign material. A clogged filter will reduce or completely prevent sap flow through to the pump.</p>
<p><i>"Sap occasionally sloshes back and forth in my sap lines. Is something wrong with the pump?"</i></p>	<p>If you have good vacuum at the pump, this back-and-forth motion of the sap may be the natural result of the pressure inside the trees dropping to the point where it cannot push the sap out into your tap lines. This can happen as the temperature drops. When tree pressure increases, the sap will begin flowing toward the pump again, often surging for a period of time.</p>

TECHNICAL SUPPORT



For all technical inquiries, please refer to our website, www.thebosworthco.com, Maple Sap Pumps Application, or contact The Bosworth Company. Be sure to have your pump serial number readily available if contacting Technical Support. You can email us at info@thebosworthco.com or call 401-438-1110. Technical support is available Monday-Friday, 8AM-4:30 PM. After hours support is provided as resources are available.

Guzzler G2-0501N SapPuller Pump Exploded View

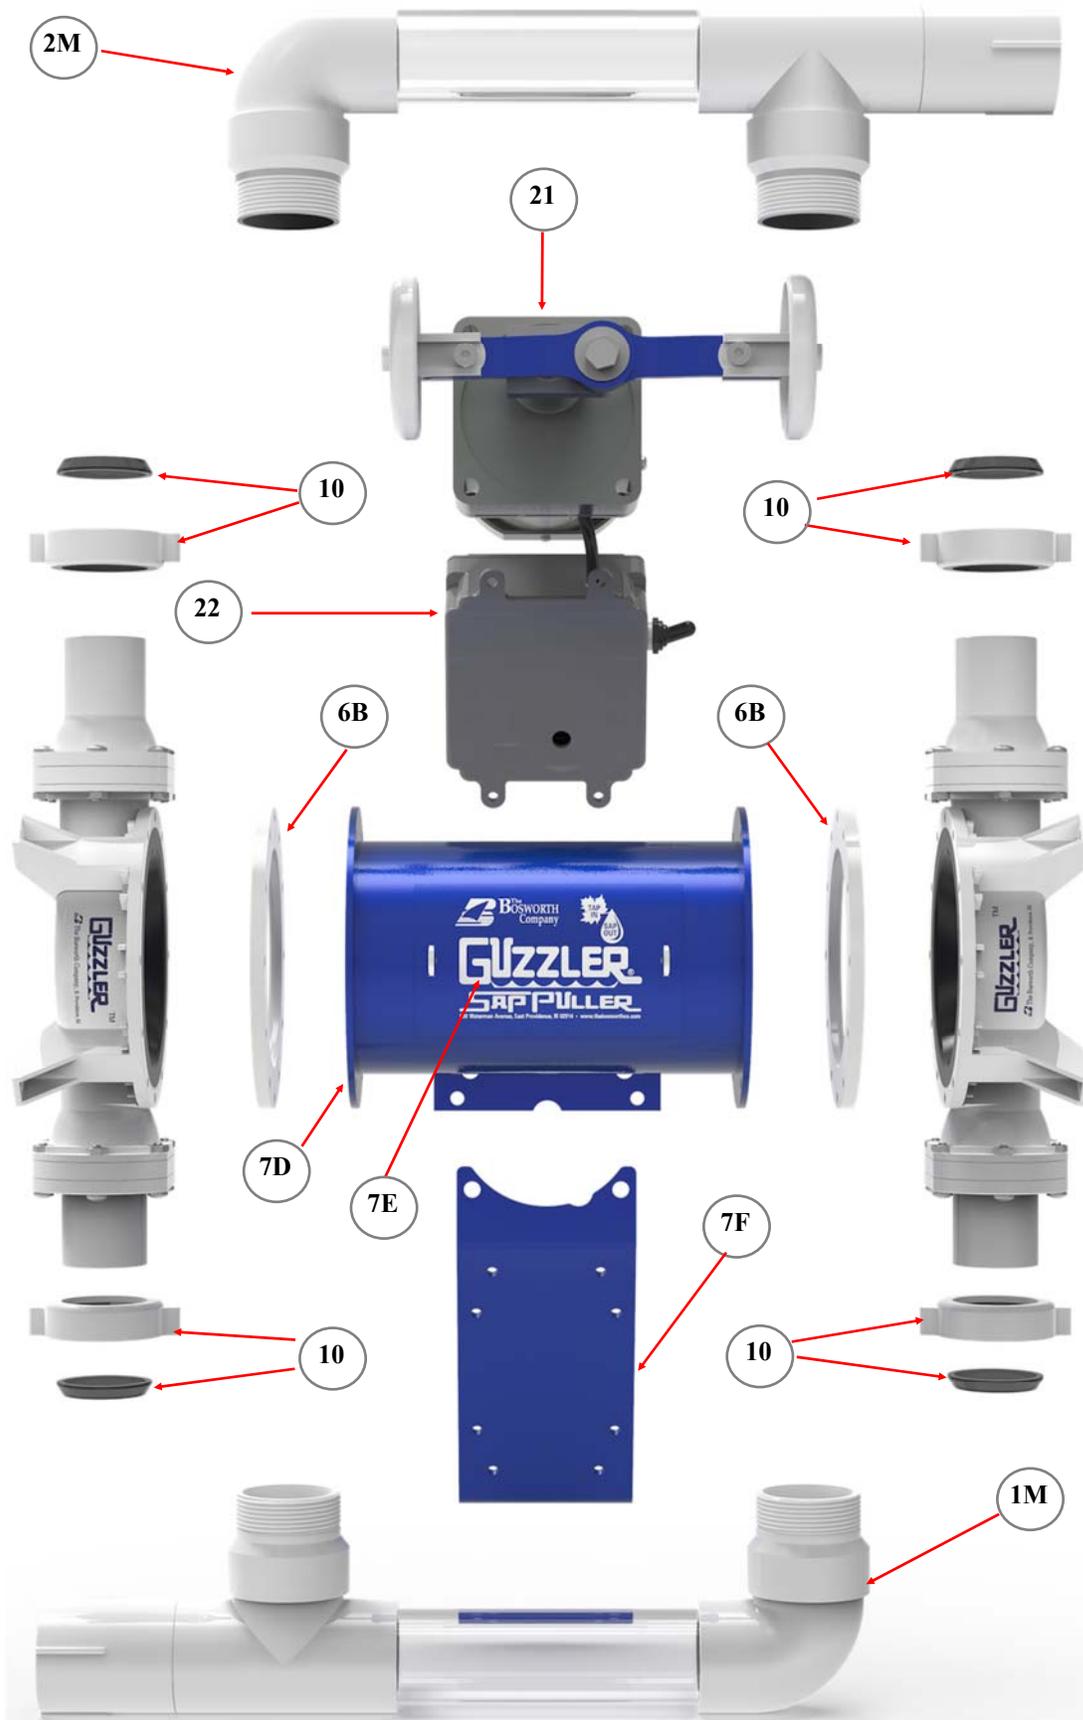

Guzzler G2-0501N SapPULLer Pump - Exploded View

1G	Pump Inlet Flange: 1-1/2 in smooth
1M	Pump Inlet Manifold
2G	Pump Outlet Flange: 1-1/2 in smooth
2M	Pump Outlet Manifold
3B	Button & Stainless Steel Washer
4	Clevis
4B	Connecting Rod
5	Pump Body
6B	Intermediate Ring
7D	Pump Housing
7E	Housing Cover Plate
7F	Pump Support Leg
10	Coupler Nut (4) & Nylon Sleeve (4)
12	Misc. Hardware (10-24 Screws & Nuts) (10) (connects 1 pump body to housing)
12C	Diaphragm Screw
13	Diaphragm—FDA Buna-N
15	Umbrella Valve Set: Umbrella valves (2), valve stops (2), O-rings (4), screws & nuts
18B	Connecting Rod Bolt w/washer
PS-G2	Connecting Rod-Clevis Shoulder Bolt & nut
19A	Crank Arm w set screws (2)
21	GearMotor
22	Switch Box w/Toggle Switch, Capacitor, power & motor cords and connectors
22A	Motor-Switch Box Cord with connectors
22B	Power Cord

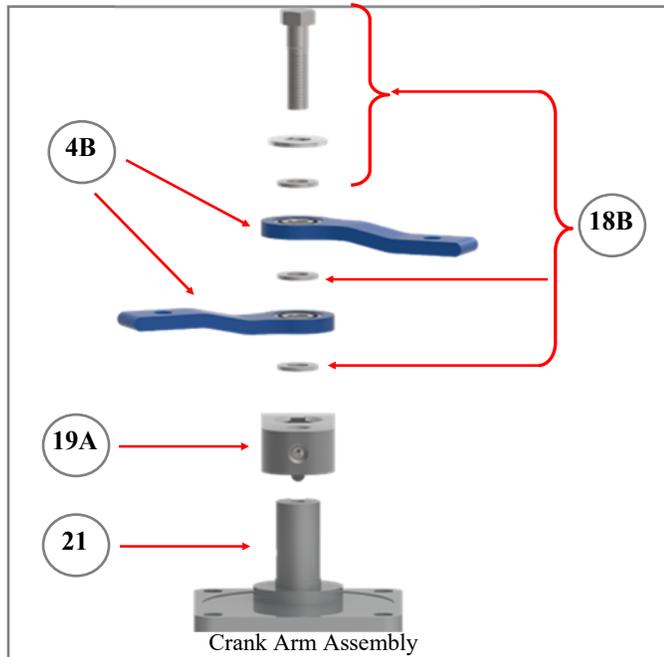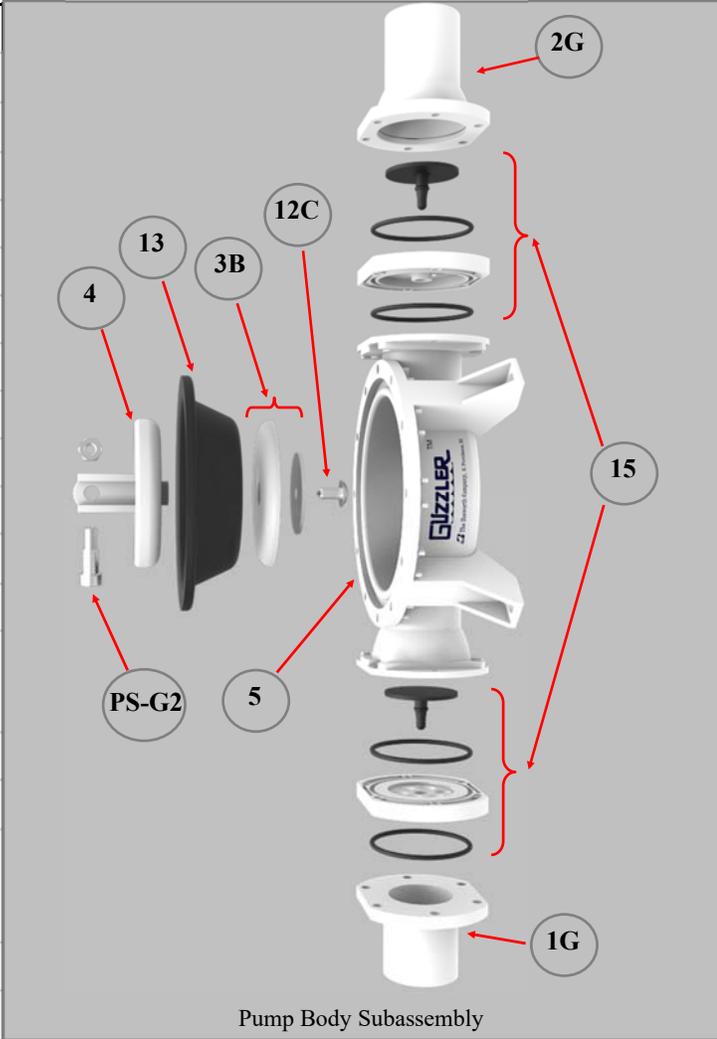



930 WATERMAN AVENUE
EAST PROVIDENCE, RI 02914
WWW.THEBOSWORTHCO.COM
888-438-1110